


如果用户购买带 WIFI 版本的雷电拓展坞时请注意：

If you purchase a Thunderbolt docking station with WIFI, please note:


1. 安装驱动 (Install WIFI and BT driver):

- 接入 Windows 上行机后设备管理器里面有未知设备和蓝牙感叹号，需要手动安装拓展坞上的 WIFI 和 BT 驱动，请从官网下载驱动文件。
- After connecting to a Windows computer, there are unknown devices and Bluetooth exclamation marks in the device manager. You need to manually install the WIFI and BT drivers on the Thunderbolt dock. Please download the driver files from the official website.

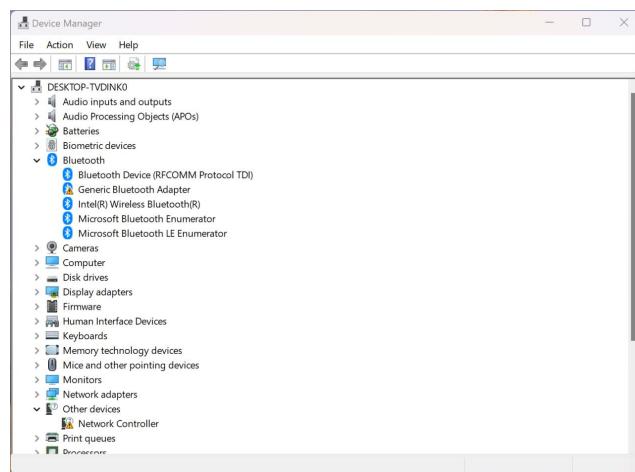

2. 选择 WIFI (Select WIFI device):

- WIFI 驱动安装成功后在设备管理器里面有两个 WIFI，用户可以在设置里选择使用 WIFI1 或者 WIFI2。
- After the WIFI driver is successfully installed, there are two WIFIs in the device manager. Users can choose to use WIFI1 or WIFI2 in the settings.

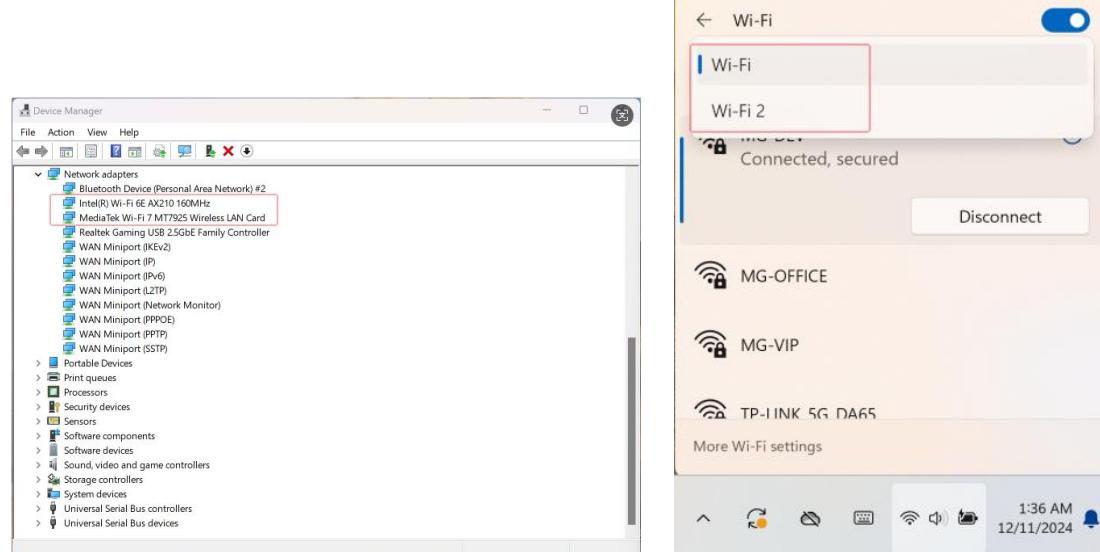

3. 选择蓝牙 (Select BT device):

- 安装完驱动后在设备管理器里面有两个蓝牙设备，先在设备管理器里禁用两个蓝牙，然后再重新启动要使用的蓝牙设备即可。
- After installing the driver, there are two Bluetooth devices in the device manager. Firstly disable the two Bluetooth devices in the device manager, and then enable the Bluetooth device you want to use.

